



Installation of the Delcon relays into sockets

1. Install the relay into the socket so that there is minimum gap between the relay and socket. After that start screwing the screw in carefully making sure that thread is right.

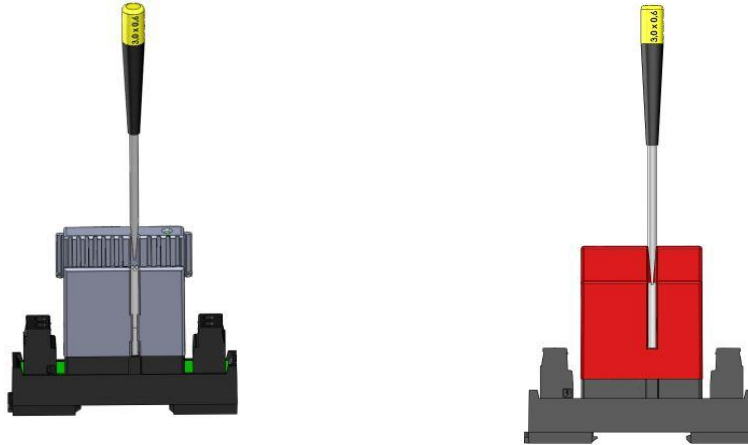

2. Maximum torque of the screw is in the table and also the torque of the terminal screw if screw terminal is used.

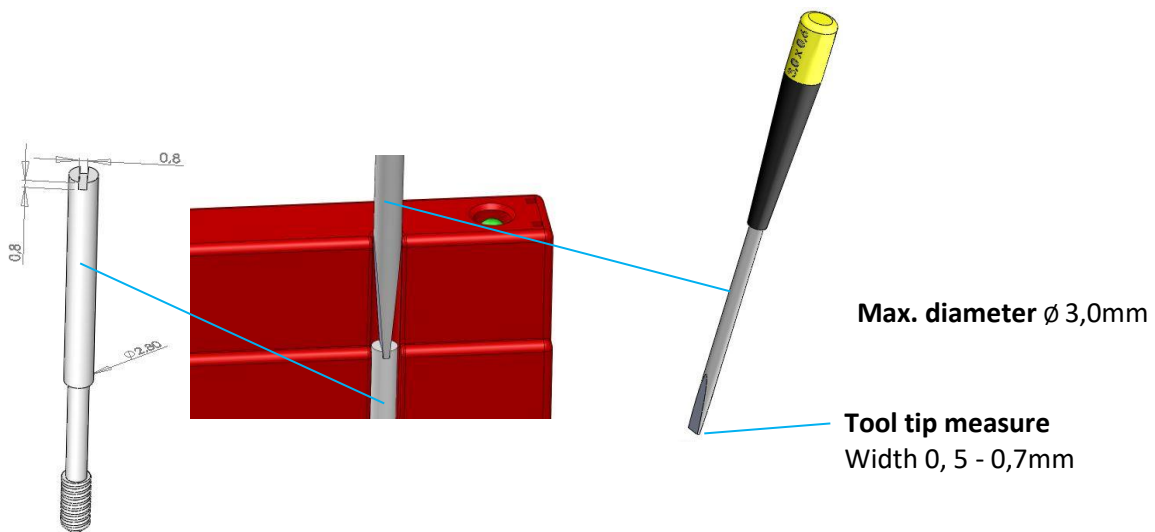

Relay screw tightening torque	Dry	Max 0.1 Nm
--------------------------------------	-----	------------